

Carol-Ann Replacement Footswitch Programming Manual

The Carol-Ann replacement footswitch has some basic programmability that allows you to have the effect loop automatically turn on when a certain channel or the lead boost is activated.

This works on both our 4-button and 5-button footswitches. Please note, however, that only certain Carol-Ann amps have the ability to switch their effect loop. These amps were shipped with 5-button footswitches.

To program the loop to turn on automatically for one or more channels:

Power up the footswitch while holding the footswitch buttons for the desired channels. Keep holding until all the LEDs turn on.

To program the loop to turn on automatically when the lead boost is activated:

Power up the footswitch while holding the lead boost button. Keep holding until all the LEDs turn on. Please note that, if you activate the lead boost when on channel 2 or 3, the loop will turn off if you switch to channel 1.

To program the loop to never turn on automatically:

On 4 button footswitches: hold one channel button AND the lead boost as you power up the footswitch. Keep holding until all the LEDs turn on.

On 5 button footswitches: hold the fx loop button as you power up the footswitch. Keep holding until all the LEDs turn on.